PARTS LIST

for

Whirlpool

27" ELECTRIC BUILT-IN SELF-CLEAN OVEN

MODEL
RB160PXL-1

Panoramic

FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS

Whirlpool CORPORATION
Benton Harbor, Michigan.

5-83 Litho in U.S.A.

Part No. 884039

2260-9

CONTROL PANEL AND FAN ASSEMBLY PARTS

For Model: RB160PXL-1

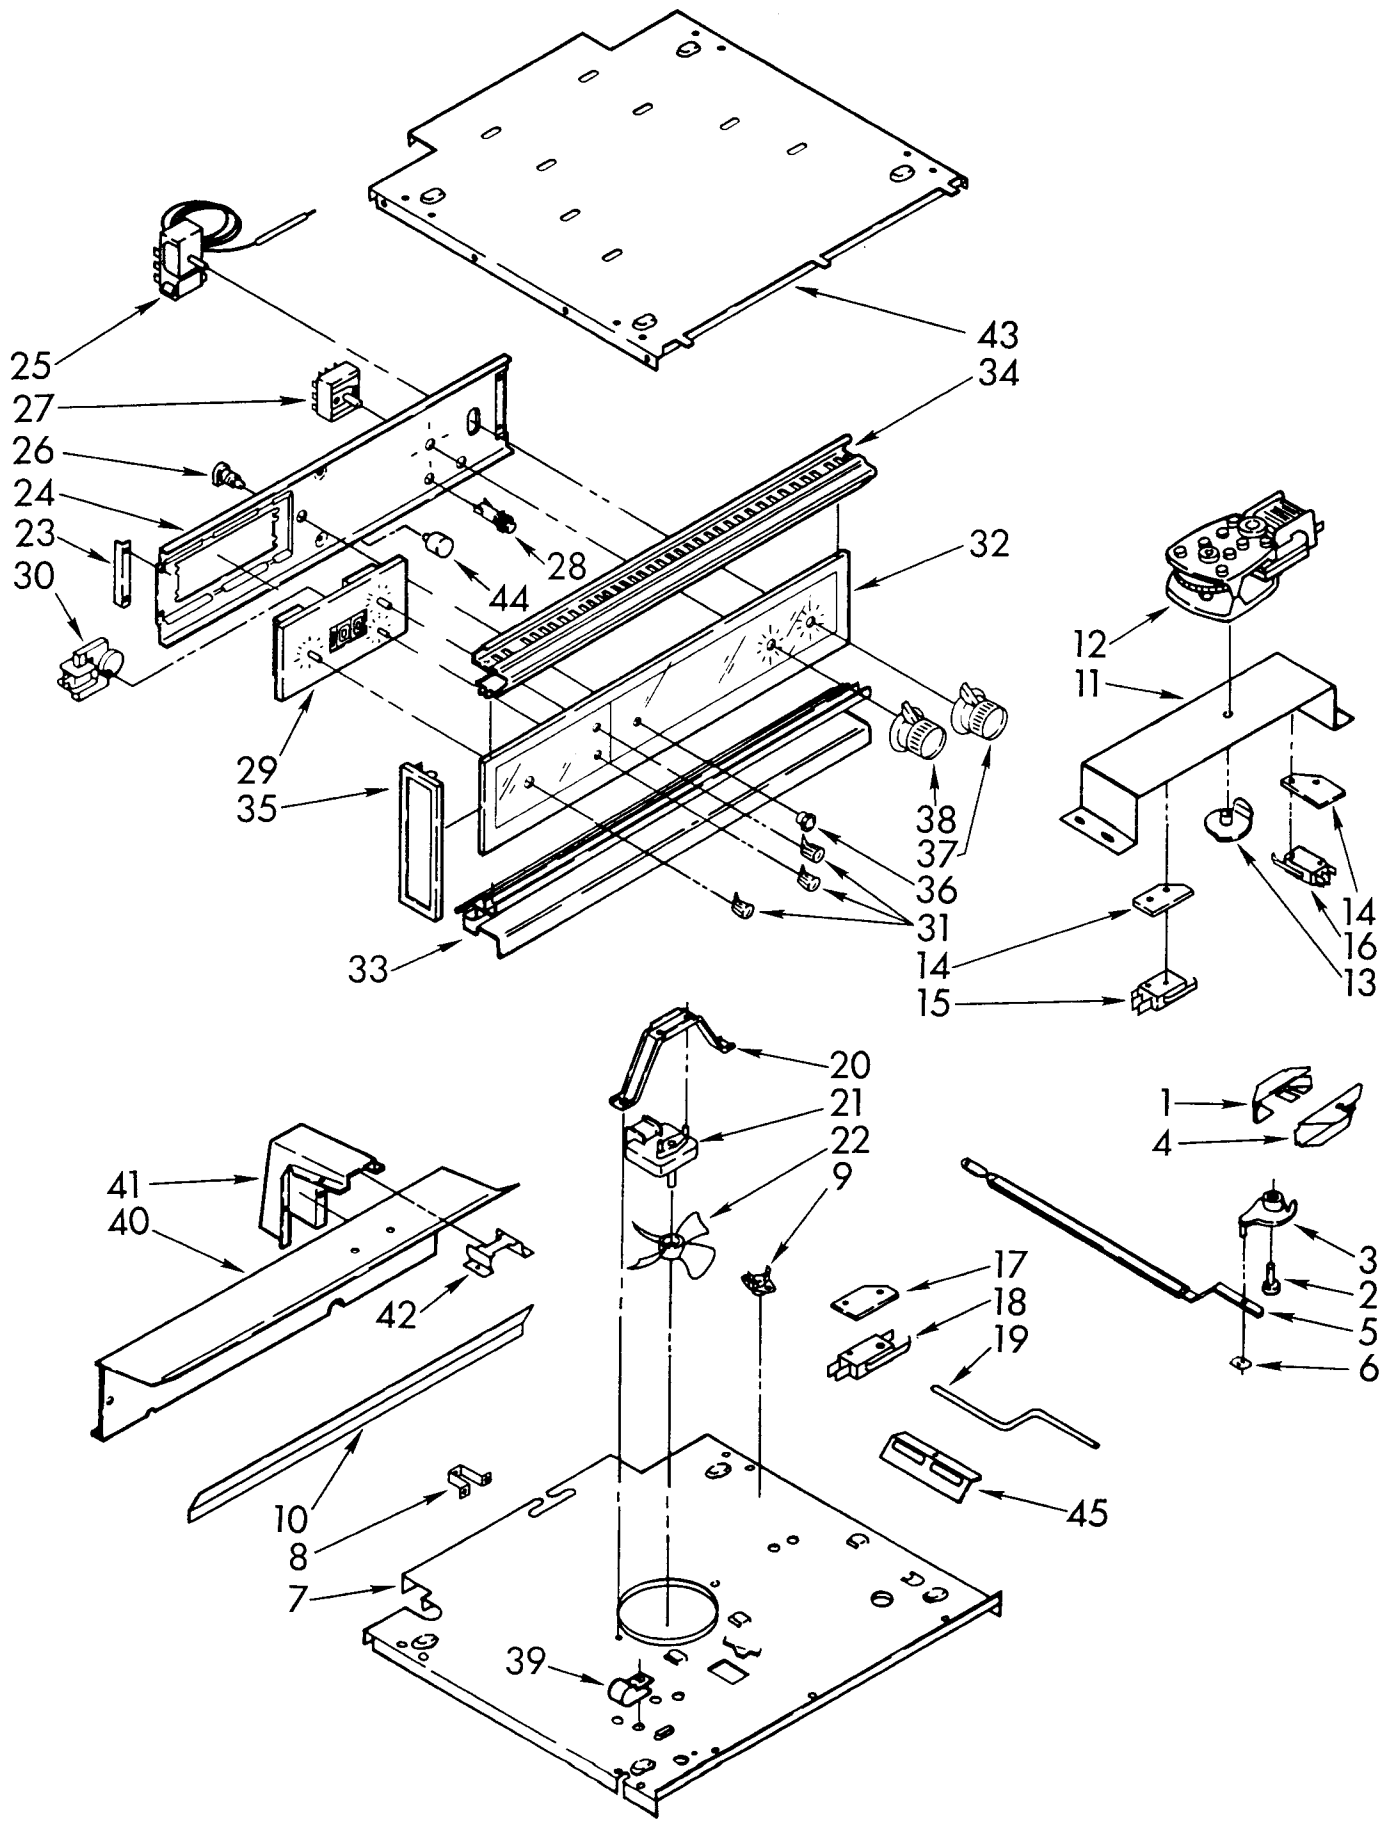

1	877614	Housing, Latch
	241422	Washer (2)
	868430	Screw, 10-24 x 1/2 (2)
2	241564	Axle, Latch
3	834484	Latch, Door
	877628	Alternate
4	868513	Cover, Latch Housing
	256158	Pushnut, 1/4"
5	868523	Tie Bar
6	241547	Pushnut, 3/16"
7	868979	Casing, Fan
	681151	Screw, 10-24 x 1/2 (3)
8	868798	Spacer, Fan Casing
	486608	Washer, Flat
	681151	Screw, 10-24 x 1/2 (13)
9	868980	Thermal Protector
	680406	Screw, 6-32 x 5/16 (2)
10	868981	Shield, Control Panel
	681151	Screw, 10-24 x 1/2 (2)
11	868982	Support, Latch Motor
	681151	Screw, 10-24 x 1/2 (2)
12		Motor, Door Latch
	834849	Alternate
	868983	Alternate
	877619	Alternate
	273225	Screw, 8-32 x 5/16 (2)
13		Cam, Door Latch
	877629	Alternate
	834483	Alternate
	241547	Pushnut, 3/16"
	455105	Pin, Spring
14	834905	Insulator, Limit Switch (2)
15		Switch, Lower Limit
	834906	Alternate
	868986	Alternate
	868985	Alternate
	877800	Alternate
	9405910	Screw, 4-40 x 5/8 (2)
16		Switch, Upper Limit
	868280	Alternate
	868987	Alternate
	868988	Alternate
	877801	Alternate
	834903	Screw, 4-40 x 1-1/4 (2)
17	868528	Insulator, Switch
18	868527	Switch, Limit
	834852	Screw (2)
19	868526	Rod Switch Interlock
20	866393	Bracket, Fan Motor
	681151	Screw, 10-24 x 1/2 (2)
21		Motor, Fan
	868989	Alternate
	877550	Alternate
	877615	Alternate
	271482	Nut, 6/32 (2)
22	868990	Fan Blade
	866392	Clip, Retainer

23	866395	Support, Control Bracket (2)
	681151	Screw, 10-24 x 1/2 (4)
24	868402	Bracket, Control
	681151	Screw, 10-24 x 1/2 (4)
25	868808	Thermostat, Oven
	486525	Screw, 8-32 x 3/16 (2)
26	866138	Switch, Oven Light
	98754	Nut, 3/8-27
27	868991	Switch, Oven Selector
	486525	Screw, 8-32 x 3/16 (2)
28	868433	Indicator, Light (2) (Clean, Lock)
	868172	Indicator, Light (Oven)
29	868992	Timer, (Digital) (Includes Illus. 30 & 31)
	487836	Nut, 10-32 (2)
30	866403	Motor, Timer
31	241383	Knob, Timer (3)
32	868993	Panel, Glass (Control)
	866454	Tape, Foam (16")
33	868531	Base, Control Panel
34	868994	Top, Control Panel
	595119	Screw, 10-24 (5)
35		End Cap
	868995	R.H.
	868996	L.H.
	868430	Screw, 10-24 x 1/2 (4)
36	866053	Bezel, Switch
37	868997	Knob, Thermostat
38	868998	Knob, Selector
39	865797	Clamp, Strain Relief
	273225	Screw, 8-32 x 5/16
40	866411	Housing, Control
41	866412	Duct, Oven Vent
	681151	Screw, 10-24 x 1/2 (4)
42	868222	Extension, Oven Vent
	681151	Screw, 10-24 x 1/2 (2)
43	868102	Top, Casing
	681151	Screw, 10-24 x 1/2 (19)
44	834956	Bumper, Stem (2)
45	877715	Bracket, Frame
	877752	Screw, 8-18 x 1/2

OVEN PARTS

For Model: RB160PXL-1

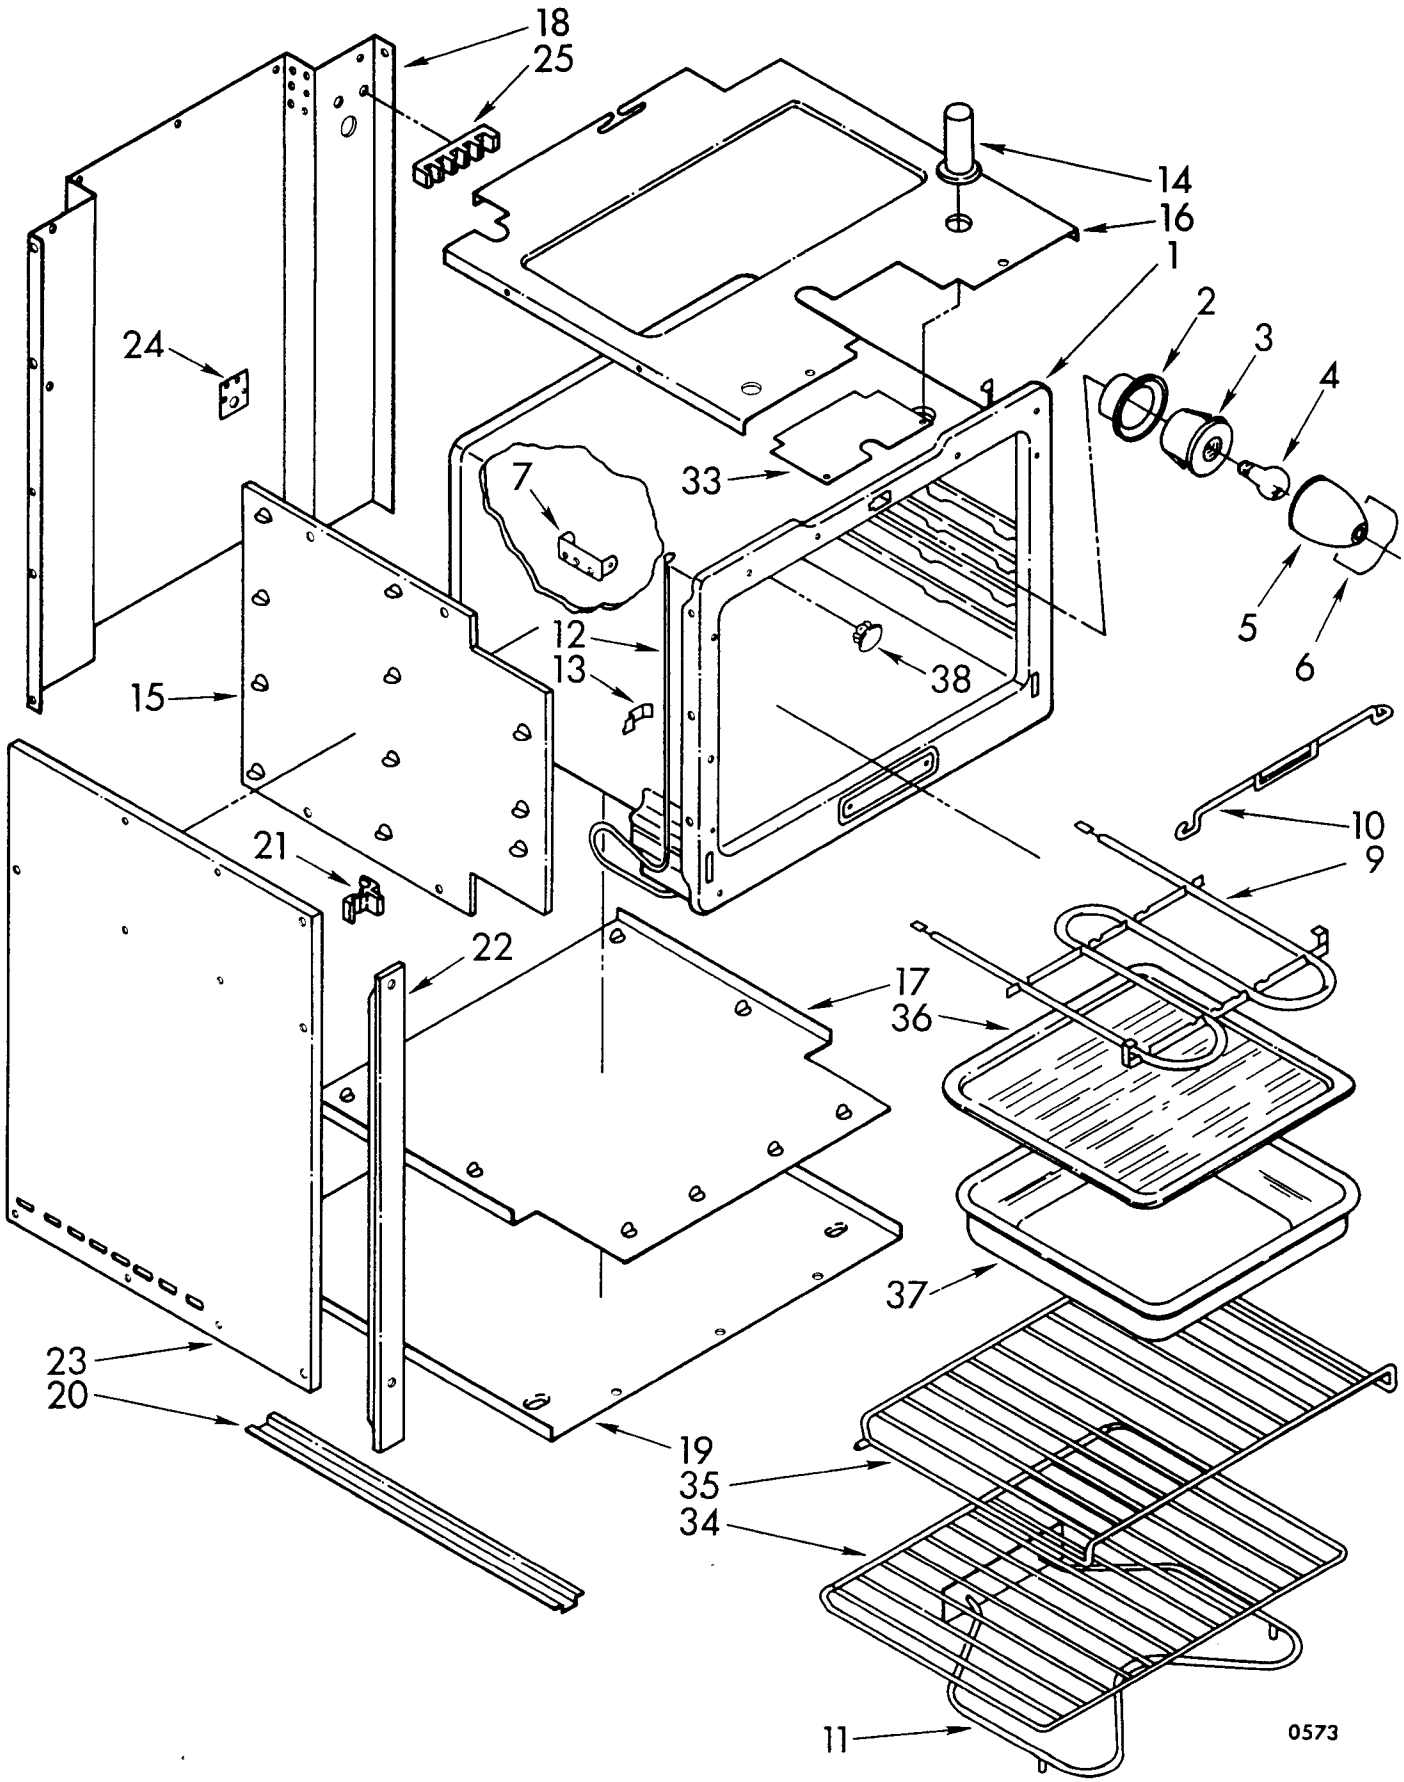

1	877799	Oven (27" Pyro)
2	877802	Cup, Light
	486146	Screw, 10-24 x 1/2 (2)
3	877803	Receptacle, Light
4	527949	Bulb, Light
5	877804	Lens, Light
6	877805	Retainer, Lens
7	865959	Bracket, Thermo Bulb
	486146	Screw, 10-24 x 1/2
9	865638	Unit, Broil
	486146	Screw, 10-24 x 1/2 (2)
10	866429	Hanger, Broil Unit
	486146	Screw, 10-24 x 1/2 (2)
11		Unit, Bake
	866375	Alternate
	868969	Alternate
	486146	Screw, 10-24 x 1/2 (2)
12	868970	Heater, Mullion
13	868971	Clip, Heater R.H.
	868972	Clip, Heater L.H.
14		Vent Tube
	865939	Alternate
	868973	Alternate
	241428	Screw, 10-24 x 3/8 (2)
15	866376	Retainer, Insulation Side (2)
16	868974	Retainer, Insulation Top
17	866379	Retainer, Insulation Bottom
	681151	Screw, 10-24 x 1/2 (8)
18	868975	Casing, Back
	681151	Screw, 10-24 x 1/2 (5)
19	868976	Casing, Bottom
	681151	Screw, 10-24 x 1/2 (8)
20	868977	Support, Bottom Casing (2)
	681151	Screw, 10-24 x 1/2 (8)
21	866382	Spacer Trim (4)
22	866383	Trim, Oven Front (2)
23	868978	Casing, Side (2)
	681151	Screw, 10-24 x 1/2 (24)
	834649	Screw, 10-24 x 7/8 (2)
24	868868	Plate, Conduit
25	241212	Block, Terminal Main
	834649	Screw, 10-24 x 7/8 (2)
	487836	Nut, Hex 10-32 (3)
	680363	Screw, 10-24 x 1/2
33	868524	Cover, Access
	681151	Screw, 10-24 x 1/2 (2)
34	834731	Rack, Oven Regular
35	834732	Rack, Oven Offset
36	866219	Grill, Broiler Pan
37	866218	Pan, Broiler
38	142017	Plug, Button

LITERATURE AND OPTIONAL PARTS

OPTIONAL PARTS NOT INCLUDED

SPLICING WIRES--25FT. LENGTH

242828	Wire, Black 12 Ga. 150~C

	242820	Wire, Black 14 Ga. 150~C
	242821	Wire, Blue 14 Ga. 150~C
	242822	Wire, Brown 14 Ga. 150~C
	242830	Wire, Brown 14 Ga. 200~C
	242823	Wire, Green 14 Ga. 150~C
	242824	Wire, Orange 14 Ga. 150~C
	242829	Wire, Red 12 Ga. 150~C
	242825	Wire, Red 14 Ga. 150~C
	242831	Wire, Red 14 Ga. 200~C
	242826	Wire, White 14 Ga. 150~C
	242827	Wire, Yellow 14 Ga. 150~C
	242832	Wire, Yellow 14 Ga. 200~C
INSULATION		
	261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
	241430	Foil, Aluminum Oven (18" x 25!)
REFINISHING MATERIAL		
	261810	Touch-Up Oven (1 Oz.)
	261582	Grease
:TLITERATURE PARTS		
	877797	Tech Sheet
	877806	Guide, Owner's
	866338	Installation Instructions
	308500	Book, Cooking Guide
	884039	List, Parts

DOOR PARTS

For Model: RB160PXL-1

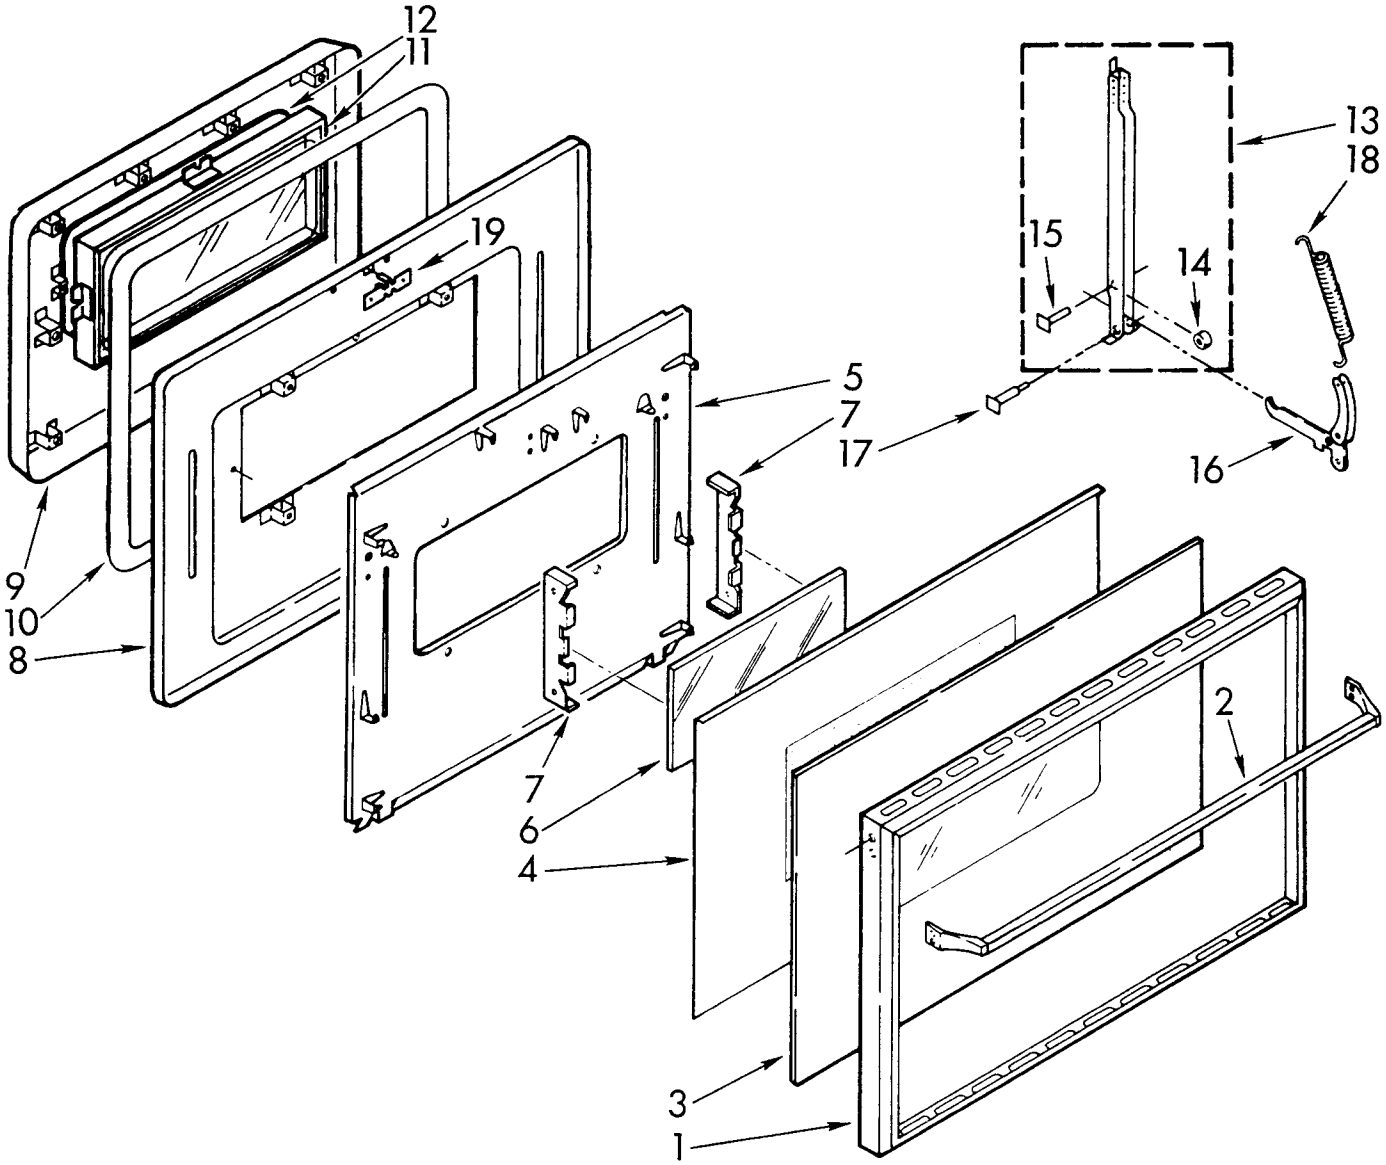

1	868999	Frame, Oven Door
2	877500	Handle, Oven Door (Includes 866047 End Caps)
	866155	Screw, 6-32 x 3/8 (4)
	271482	Nut, 6-32 (4)
3	868223	Glass, Outer
4	868224	Panel, Heat Reflector
5	877501	Panel, Air Wash
	681151	Screw, 10-24 x 1/2 (4)
6	868502	Glass, Inner
7	868503	Retainer, Glass
8	877502	Liner, Oven Door
	681151	Screw, 10-24 x 1/2 (7)
	868430	Screw, 10-24 x 1/2 (2)
9	877503	Baffle, Weldment
	142001	Plug Button 3/16"
10	877504	Seal, Oven Door
11	877505	Window Assembly
	681151	Screw, 10-24 x 1/2 (2)
12	877506	Seal, Window
13	865972	Channel, Assembly (2)
14	834471	Roller, Door Stop (2)
15	241423	Rivet
16	865640	Arm, Hinge
17	241334	Pin, Hinge
18	241312	Spring, Door
	247326	Screw, 10-24 x 1/2 (2)
	241422	Washer
	868430	Screw, 10-24 x 1/2 (2)
19	877507	Strike
	868430	Screw, 10-24 x 1/2 (5)
	241422	Washer (2)